

20 TON FIREWOOD PROCESSOR CONVEYOR



Operator's Manual

MechMaxx

www.mechmaxx.com

GENERAL INFORMATION

PURPOSE OF THIS MANUAL

This manual is intended to ensure the machine is used as designed by the manufacturer, with safety as a top priority. Anyone operating the machine or working nearby must read and understand this manual thoroughly. It is written for trained operators with the necessary knowledge and basic skills required for handling this type of machinery.

Before installing or operating the machine, familiarize yourself with the content of this manual. Review the machine's features and safety components carefully before use. Always keep this manual with the machine for easy reference.

The instructions, descriptions, and technical specifications in this manual reflect the most current information available at the time of printing. However, as the manufacturer continuously improves and updates the machine, changes may be made to its features or safety-related components without prior notice.

Always keep this manual in the immediate vicinity of the machine.

PURPOSE OF USE

The firewood processor is designed specifically for preparing firewood from pruned wood or logs. It must not be used to process treated wood, such as construction waste. Materials containing sand, nails, or other foreign objects can cause serious damage to the machine.

The maximum allowable log diameter is 15 inches (38 cm)—this limit must not be exceeded. When estimating the diameter, consider that irregular shapes, branches, and burrs can increase the effective size of the log, potentially preventing proper feeding into the machine.

Do not attempt to split logs longer than 24 inches (60 cm).

TABLE OF CONTENTS

TABLE OF CONTENTS	2	FAILURES AND REMEDIAL MEASURES	32
SPECIFICATIONS	3	JAMMING OF THE CUTTING BLADE	32
GENERAL SAFETY INSTRUCTIONS	4	JAMMING OF THE WOOD ON THE SPLITTING KNIFE	32
SAFETY INSTRUCTIONS	4	HYDRAULICS DIAGRAM	33
SAFETY SIGNS	4	Hydraulic Hose List	34
ASSEMBLY	6	EXPLODED VIEW	35
CONTENTS SUPPLIED	6	MAIN EXPLODED DRAWING	35
INSTALLATION THE MACHINE	6	Main Parts List	36
SETTING UP BEFORE USE	22	FEED CONVEYOR EXPLODED DRAWING	37
CONNECT the TERMINAL to the BATTERY.	22	Feed Conveyor Parts List	37
ENGINE	22		
ADD THE HYDRAULIC OIL.	24		
LUBRICATION	24		
WOOD FEEDING, CUTTING AND SPLITTING	24		
USING THE DISCHARGE CONVEYOR	25		
AFTER USE	25		
OPERATING	26		
MACHINE CONTROLS AND FUNCTIONS	26		
PERFORMING A TEST RUN ON THE MACHINE	27		
MAINTENANCE	28		
ADJUSTING THE LOG LENGTH	28		
HEIGHT ADJUSTMENT OF THE SPLITTING KNIFE	28		
REPLACING THE SPLITTING KNIFE	28		
ADJUSTING THE TIGHTNESS AND ALIGNMENT OF THE DISCHARGE CONVEYOR BELT	28		
CUTTING BLADE AND DRIVE END	29		
CHANGING THE HYDRAULIC OIL	29		
CONVEYOR MAINTENANCE	30		
WASHING AND CLEANING	31		
STORAGE	31		
MAINTENANCE TABLE	31		

SPECIFICATIONS

Model	HLS20	
Engine	Honda GX390	ZONSEN GB460
Displacement	389 cc	459 cc
Weight	1246 lbs	
Height/width/length in transport position	Transport position 251/136/262 (cm)	
Input conveyor	41"X10"	
Output conveyor	126"x10"	
Saw bar/chain	18"	
Max log diameter	15"	
Max/min log length	Log max 24"; min 6-1/2"	



GENERAL SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS

- This device is designed to be operated by only one operator. The danger zone is 10 m from the machine.
- Persons under 18 years of age may not operate the machine.
- The operator must ensure that use of the device does not cause danger to others and that there are no unauthorised persons in the danger zone.
- The machine may not be operated while under the influence of alcohol or other drugs, or when tired.
- The machine may not be operated unless the operator has familiarised themselves with this instruction manual.
- The machine has been designed solely for making firewood.
- The machine must be placed in the transport position whenever it is moved. When transporting the machine on a public road, it must be equipped with additional lights.
- The operator is not permitted to modify the structure or operation of the machine, or to remove protective equipment.
- The operator must wear ear protectors, sufficiently tight-fitting work clothing and gloves, protective goggles and safety footwear.
- Before starting up the machine, the operator must ensure that the machine and its guards are intact.
- Before starting up the firewood processor, the operator must ensure that all the control and safety devices are functional.
- When cleaning the machine or carrying out any maintenance, it must be disconnected from its power source.
- Note! Do not leave a running machine unsupervised!

SAFETY SIGNS

The rating plate on your machine may show symbols. These represent important information about the product or instructions on its use.

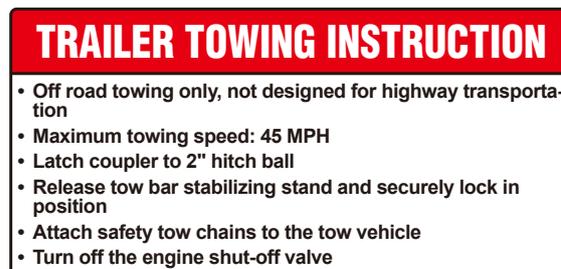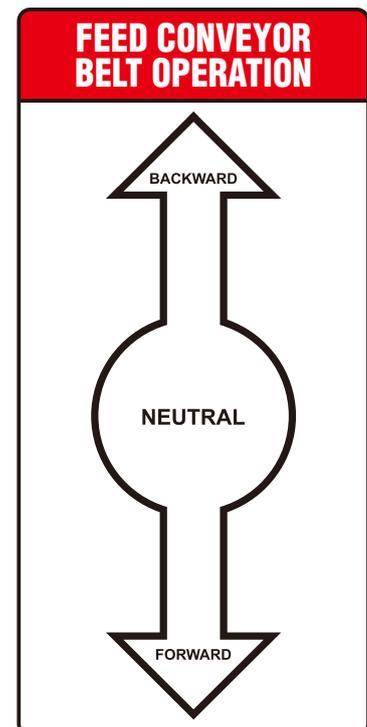

⚠ WARNING ⚠




PINCH POINT
KEEP HANDS CLEAR DURING OPERATION

STABILIZING STAND

FOLD DOWN AND LOCK THE STAND IN POSITION BEFORE SPLITTING LOG

CLEAR OFF REMAINING LOGS IN V-GROOVE

Logs might stay in the V-groove. Use this handle to clear off before next split

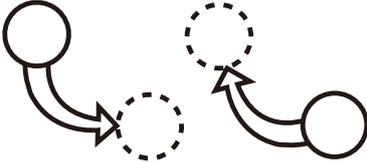

SPLIT **RETURN**

- Push handle downward, force ram moves forward to clear firewood
- Force ram returns automatically when it reaches the split point
- Push handle upward, force ram retracts back

⚠ WARNING ⚠



STAY AWAY FROM HIGH PRESSURE HYDRAULIC FLUID!
High pressure and temperature are developed in the hydraulic system. Hydraulic fluid escaping through a pin-size opening can cause skin damage

- Inspect hydraulic system regularly for leaks
- Never check leaks with hands while system is pressurized
- Seek medical attention immediately if injured by escaping fluid

⚠ WARNING ⚠



Moving parts can crush and cut. Pieces can fly out while splitting. Follow safety procedures when operating the splitter, otherwise serious injury could occur

- Always completely read the owner manual before operating the splitter
- Only one person can operate the splitter at one time
- Do not operate the splitter when someone else is helping to load the log
- Only operate the splitter when nobody else is within 10 feet
- Operator must stay in the designated spot while operating
- Only split wood along the same direction as the wood grain
- Keep hands away from wedge, endplate, hydraulic ram and split logs
- Do not leave splitter unattended during operation
- Do not set up splitter on slope or slippery surface

⚠ WARNING

LOCK OUT POWER BEFORE REMOVING SHIELD GUARD

⚠ WARNING



ROTATING SHAFT CAN CAUSE SEVERE INJURY
KEEP HAIR AND LOOSE CLOTHING AWAY

INSTRUCTIONS FOR OPERATION

- Load log onto feeding conveyor belt
- Adjust to set the cut length
- Turn on conveyor "Forward" to feed log to the set position
- Pull chainsaw to cut the log
- When chainsaw returns back to its original position, the force ram starts to move to push log forward
- Force ram returns back to its original position when it reaches the split point

NOTE: Logs might stay and pile up in the V-groove. Clear off before next split. Use the handle to operate force ram to clear piled up logs

ASSEMBLY

Handle the disposal of the machine's packaging material in an environmentally - friendly manner. Check that the machine has not incurred any damage during transportation, and ensure that all necessary parts are included in the package. In the event of any defects or damage, you should contact the retailer immediately.

CONTENTS SUPPLIED

As the main components of the firewood processor are presented in the figure below



- A. Output convey
- B. Cutting and splitting unit
- C. Control unit
- D. Input conveyor
- E. Trailer

INSTALLATION THE MACHINE


1. Lift the Unit off the crate. If you are using straps, be careful not to bend or stress any components.



Before commencing the lifting operation, ensure that no other persons or animals are within the machine's danger zone! And monitor the area and ensure that it stays empty for the entire duration of the lifting.




2. Locate the wheel axle and the two tires. Then install the axle into the square tube at the rear of the processor. Center the axle in the housing and tighten the bolts.

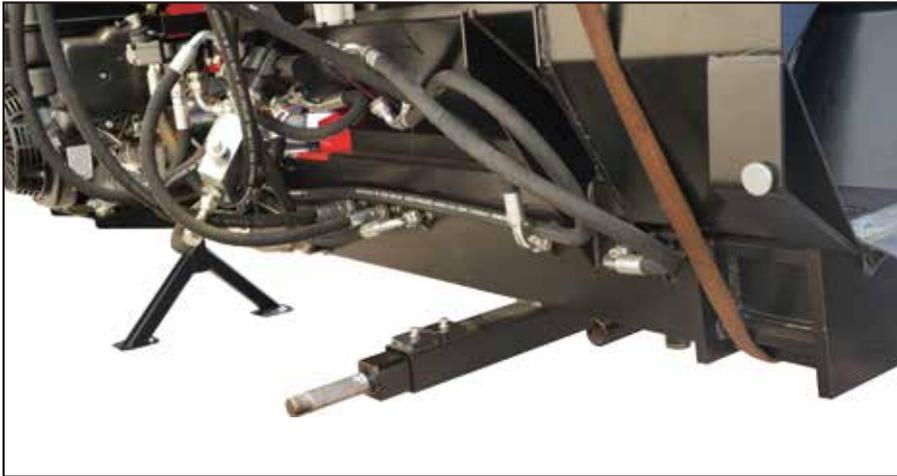

3. Install each tire and its corresponding hub onto the axle and tighten the bolts.



4. Install the tripod leg in the front mount. Pass the safety pin through (the relevant part) and secure the safety pin with an R pin. Then lower the processor to the ground.

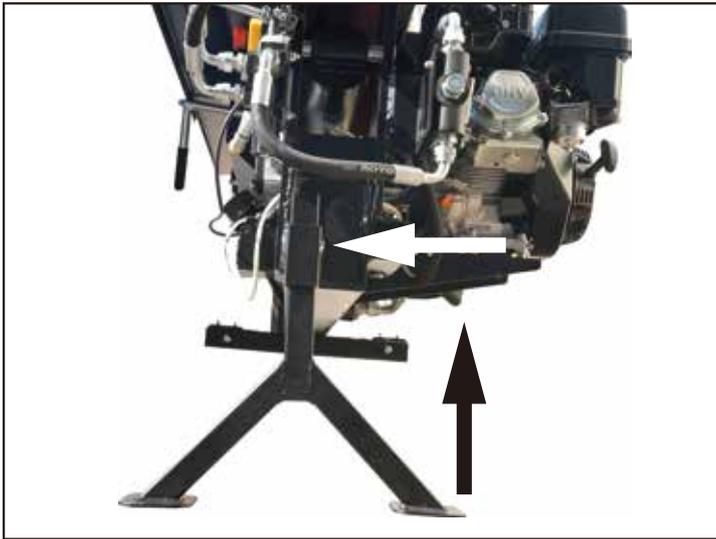


5. Install the sawing guard onto the appropriate location using 6 - 13mm nuts and bolts, ensuring that they are tightened securely.







After installing the log splitter guard, open and close it several times to check the normal operation of the limit switch. When the log splitter guard is opened, the limit switch is pressed down; when it is closed, the limit switch resets.

6. Install the wood gripper and tension spring in their designated positions.

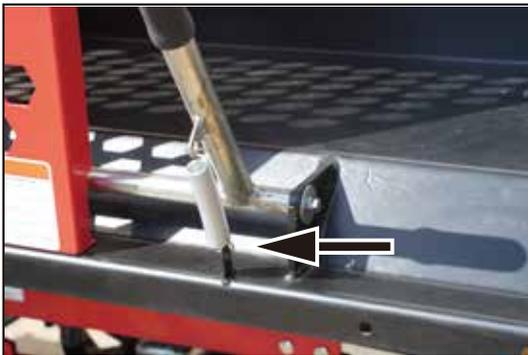

Note: In order to effectively protect the surface from scratches, please separate the wood gripper from the saw table with cardboard when installing the wood gripper.


7. Install the chainsaw arm to swivel plate with 3 bolts and nuts provided the bolts will be installed through the chain-saw arm into the threaded holes on the swivel plate. screw the gas cylinder into the swivel head that is already mounted to the sawing guard.

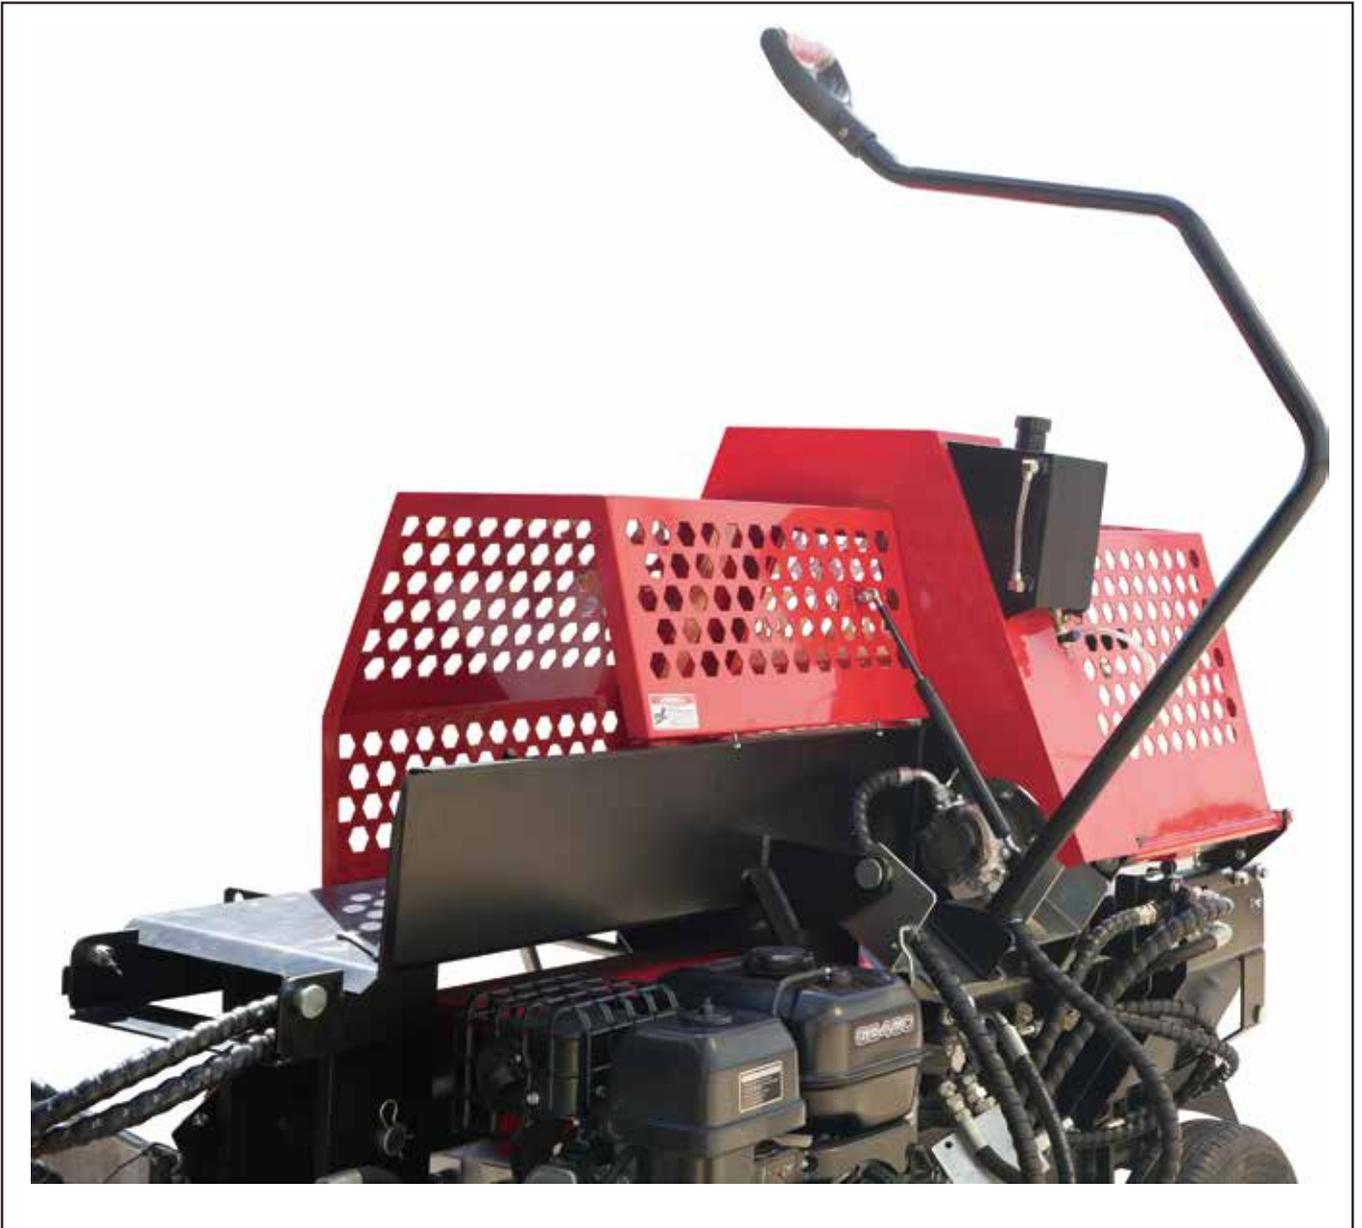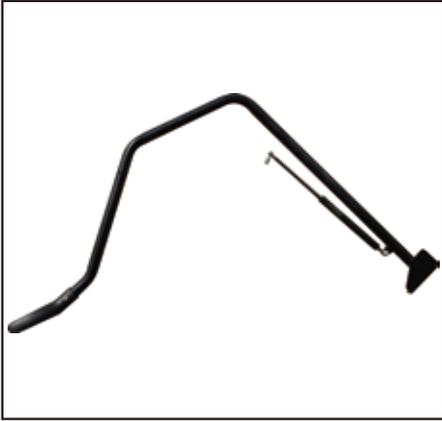

8. Install the adjustable wedge assembly.

8.1 Remove bolts and nuts from the side of the processor, install the wedge adjustment plate and tighten 2 bolts and nuts.


8.2 Assemble the adjusting rod assembly.

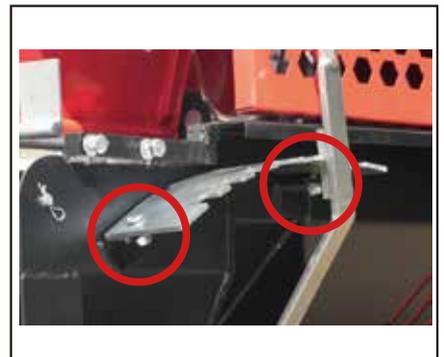



8.3 Slide the swivel bar through the mount behind the axle. Then tighten the bolt and washer.



9. Pull the adjusting rod into the position, then insert the wedge.

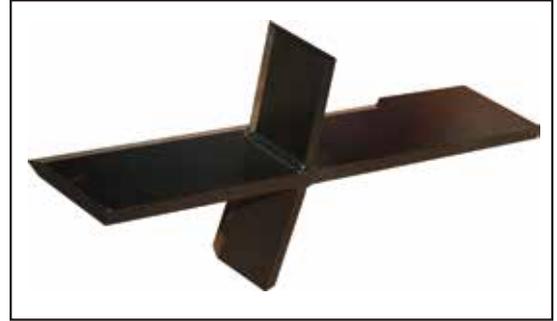

10. Install the chainsaw lubrication canister and connect it to the chainsaw.

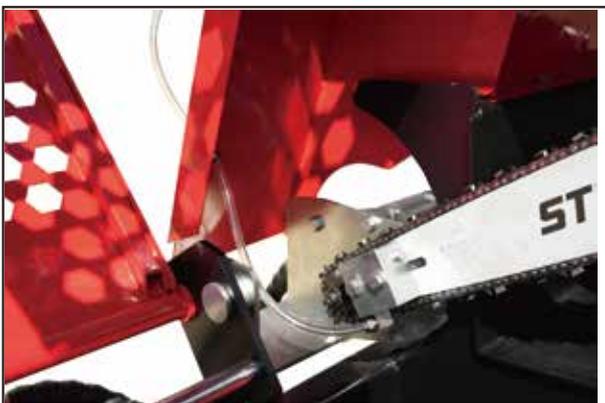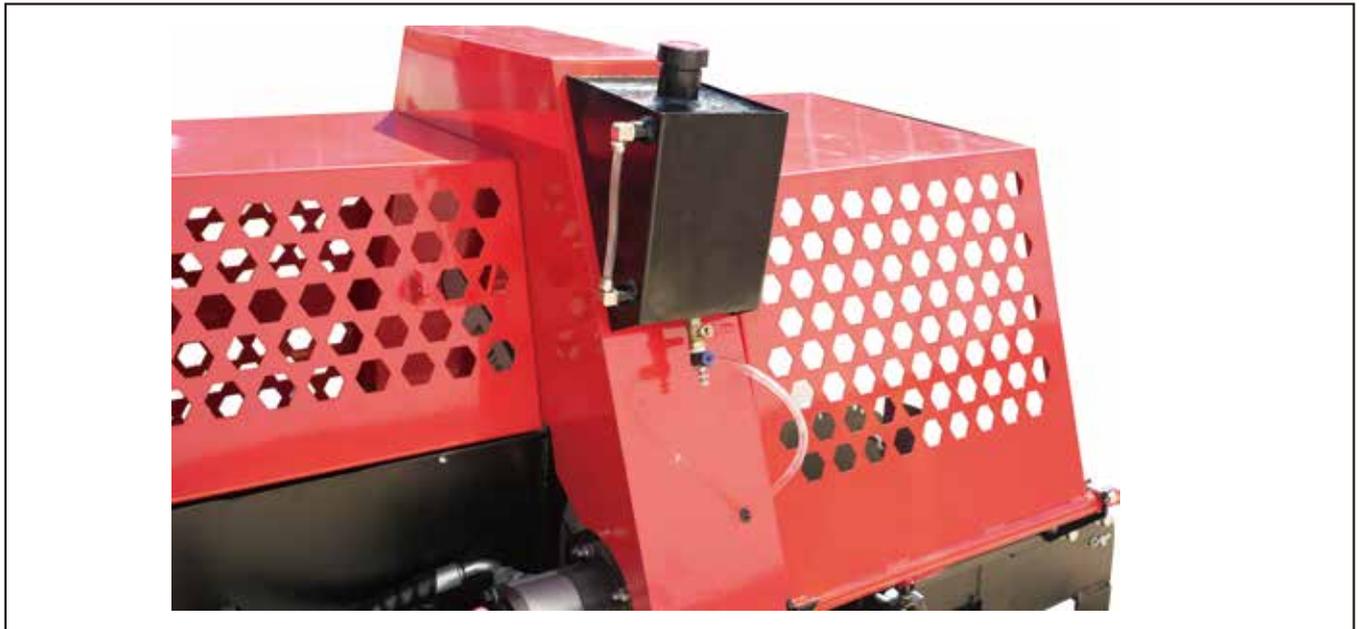


11. Install the feed delivery system in the designated area of the equipment, following the alignment marks.





Installing the feed delivery system requires two people to work together. When connecting it to the firewood processor, one person needs to hold or support the feed system using other objects until the adjustment of the feed support rod is complete. And otherwise the feed system will fall, causing personal injury and machine damage.


1. Connect the feed delivery system to the firewood processor. Pin a bolt through (the relevant parts) and secure it with a cotter pin.

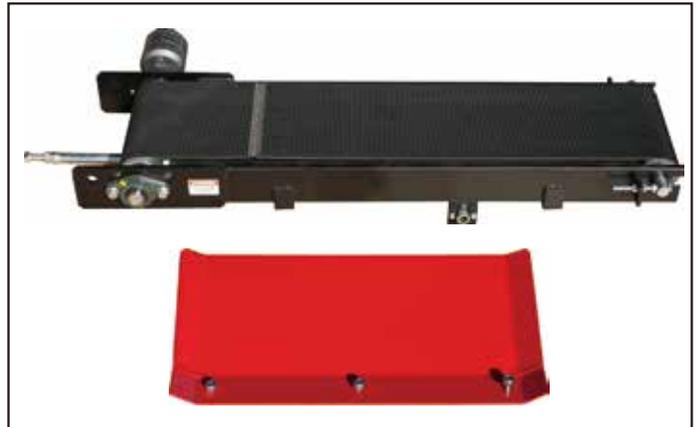


2. Install the trailer drawbar onto the main machine and secure it with bolts.

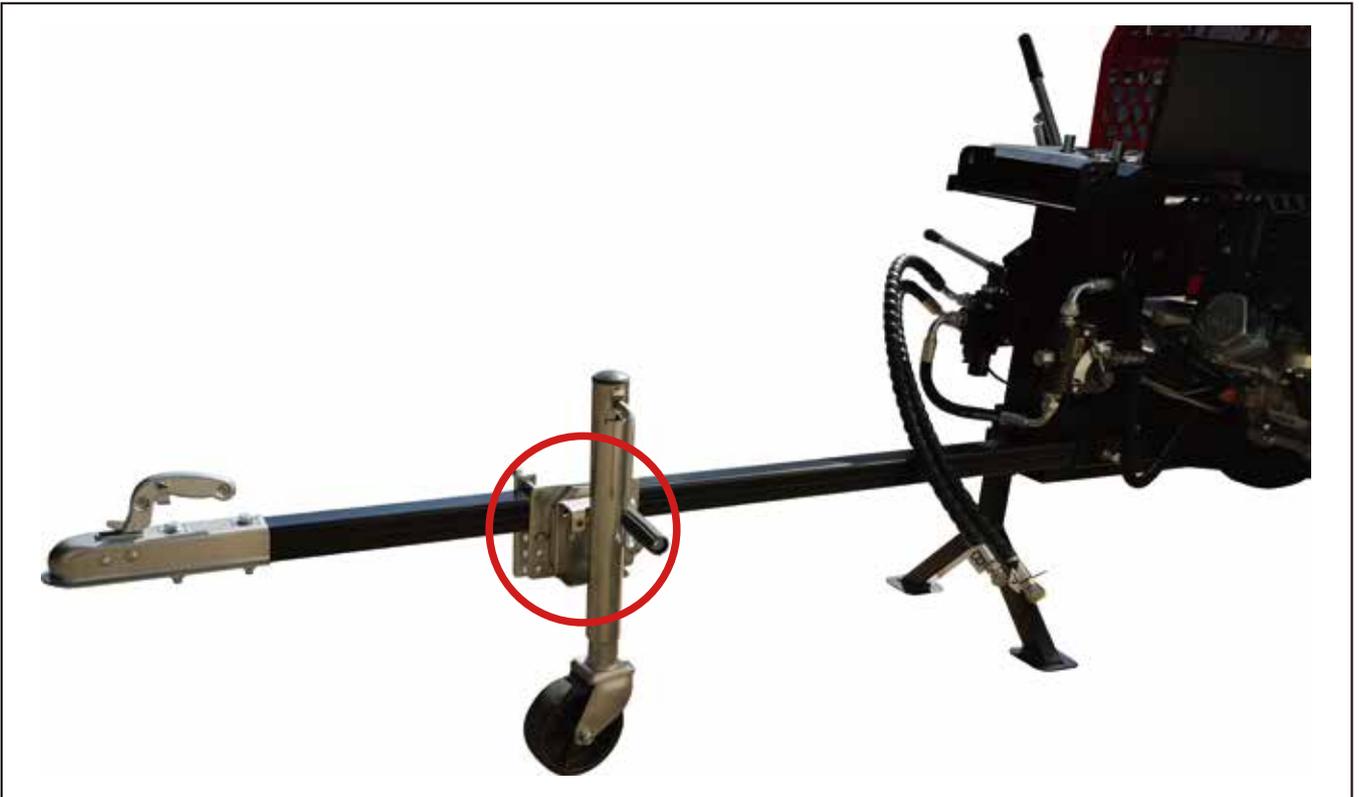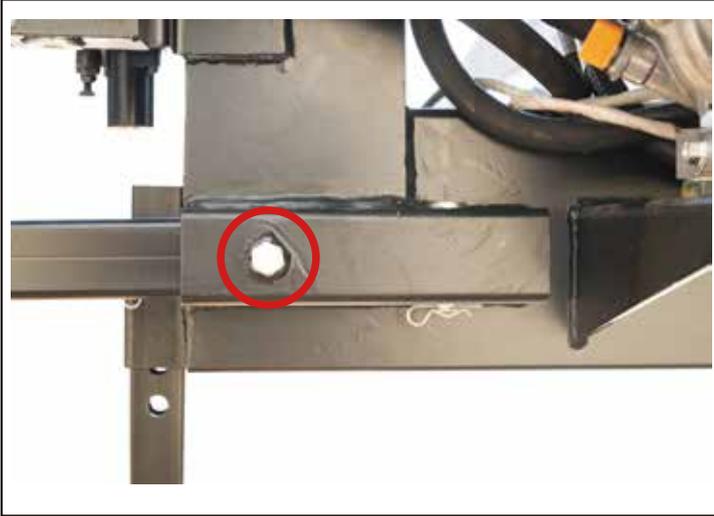

3. Insert the support rod into the specified position and rotate the end bolt of the support rod to level the feed delivery system.

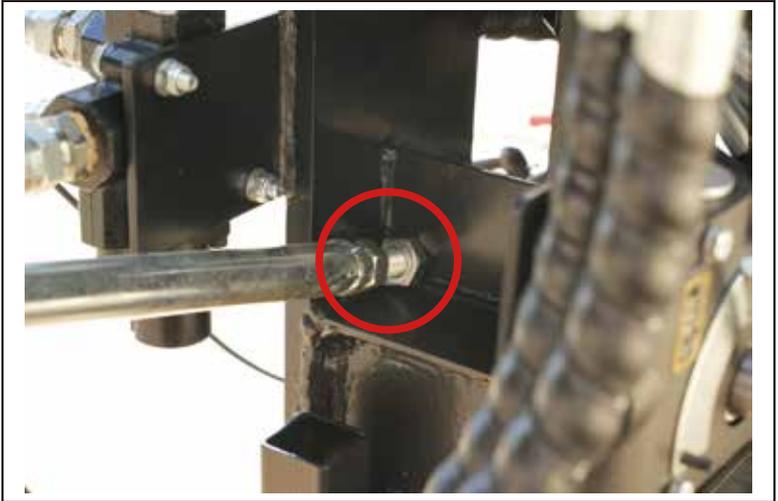

4. Install the feed damper and connect the hydraulic line to the hydraulic motor of the feed delivery system.

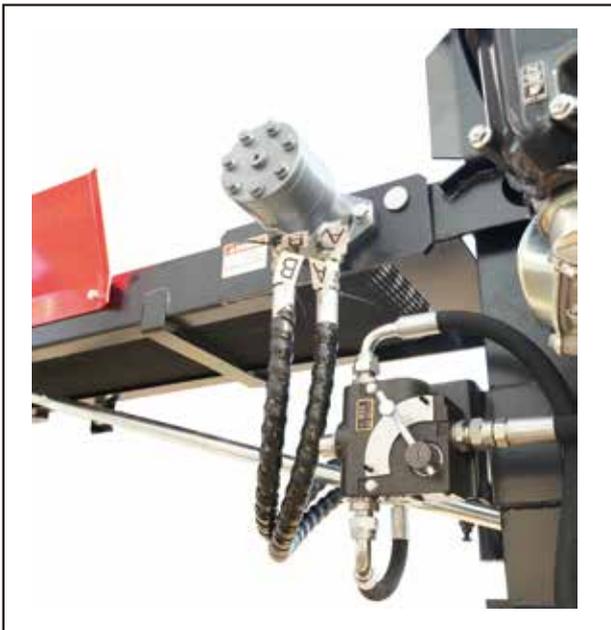

12. Install the discharge conveying system.

12.1 Mount the winch support arm to the processor with the 4 bolts provided.



12.2 Install the fixing plate on the conveyor base and tighten all bolts.



12.3 Mount the conveyor base section to the rear of the processor using a pin to pass through and secure with a cotter pin.



12.4 Lift the conveyor section up and line up the holes in the leg with the tab holes and push the support leg shaft through. Loosen the winch cable, mount the rollers onto the pins, and then insert the R - pins.



12.5 Lift the leg and put the support leg fixed shaft through the leg and tabs to hold it in place. Lower the conveyor and place the second section upside down on the first. Install bolts and washers at the swivel point. Remember that when tightening the nuts, the conveyor section must be able to swivel, so do not tighten too much.

12.6 Lift and swing the upper section of the conveyor out and install the tail pulley support. When the conveyor is extended for use, the adjustable buckle should be engaged.



12.7 Install the conveyor belt. Connect the belt and put the pin through the lacing. Turn the adjusting bolts until the conveyor is snug.



12.8 Install safety chains to avoid the leg toppling and protect the machine and personnel.



12.9 Install the belt support rod shown in this photo. It runs along the side of the conveyor and is used for retaining the belt when the conveyor is in travel position.



The belt support rod is in its rest position in the photo and is out of the way of the belt, so the machine can be operated as normal.



13.10 Install the extension plate onto the rear of the processor and connect the hydraulic line to the hydraulic motor of the discharge conveying system.



12.11 Install the mudguard.



SETTING UP BEFORE USE

CONNECT the TERMINAL to the BATTERY.

1. Battery Connection

Always connect the cables in the following sequence to avoid possible shock.

- Connect one end of the red (+) cable to the starter solenoid terminal of the compressor engine.
- Connect one end of the black (-) cable to the mounting bolt, frame bolt of the engine, or other good engine ground connection.
- Connect the other end of the red (+) cable to the battery positive (+) terminal.
- Connect the other end of the black (-) cable to the battery negative (-) terminal as shown.
- Coat the terminals and cable ends with grease if they are to remain permanently connected.



Be careful not to connect the battery with reverse polarity, as this will short - circuit the battery charging system. Since the engine has not yet been grounded to the battery ground, your uninsulated tool handles can cause a short - circuit if they also touch a grounded part while you are tightening the positive battery cable end.

2. Battery Disconnection




Once the engine is operating, it will continue to run whether the battery is connected or not. The battery should be disconnected from the engine when the processor is not going to be used for a long period of time. Always disconnect the cables in the reverse sequence of the above connection sequence.

- First, disconnect the black (-) cable from the battery negative (-) terminal.
- Next, disconnect the red (+) cable from the battery positive (+) terminal.
- Then, disconnect the black (-) cable from the grounding connection.
- Finally, disconnect the red (+) cable from the starter solenoid terminal.

ENGINE

1. Add Oil To The Engine

- First, place the pressure washer on a flat, level surface.
- Next, clean the area around the oil fill and remove the yellow oil fill cap.
- Then, if an oil funnel is available (optional), slowly pour the contents of the provided oil bottle into the oil fill opening.
- Finally, replace the oil fill cap and fully tighten it.

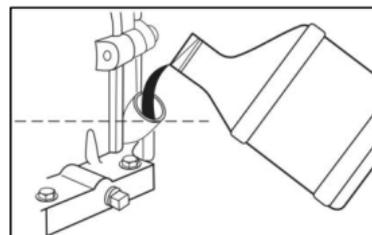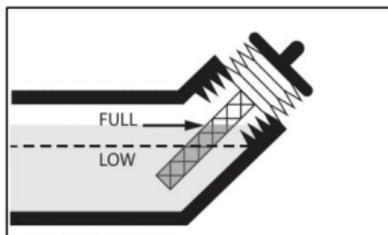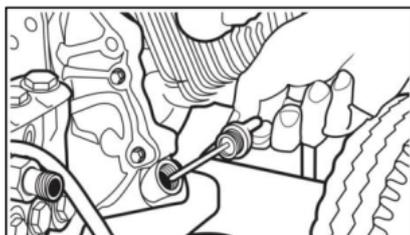

2. Add Fuel To the Engine

- a. First, place the pressure washer on a flat, level surface.
- b. Next, clean the area around the oil fill and remove the yellow oil fill cap.
- c. Then, if an oil funnel is available (optional), slowly pour the contents of the provided oil bottle into the oil fill opening.
- d. Finally, replace the oil fill cap and fully tighten it.



Failure to use fuel as recommended in this manual will void the warranty.



Fuel and fuel vapor are extremely flammable and explosive. Fire or explosion from misuse of fuel can cause severe burns and even death.

DO NOT use unapproved gasoline such as E85 (85% ethanol/15% gasoline).




DO NOT mix oil with gasoline.

DO NOT modify engine to run on alternate fuels.

If engine doesn't run properly after fueling, switch fuel brands. The engine is certified to run on gasoline. The emission control system for this engine is EM (Engine Modifications).

WHEN ADDING FUEL TO THE ENGINE, OBSERVE THE FOLLOWING STEPS:

1. Turn the engine OFF and let it cool for at least two minutes before removing the fuel cap. Loosen the fuel cap slowly to release pressure.
2. Fill the fuel tank outdoors.
3. DO NOT overfill the fuel tank. Leave space for fuel expansion.
4. Wait for spilled fuel to evaporate before cranking the engine.
5. Keep fuel away from sparks, open flames, pilot lights, heat, and other ignition sources.
6. DO NOT light a cigarette or smoke near an open fuel tank or container.
7. Clean the area around the fuel fill cap and slowly remove the cap to allow any pressure to escape.
8. Slowly add unleaded gasoline (A) to the fuel tank (B). Be extremely cautious not to fill the fuel above the baffle (C). This allows appropriate space for fuel expansion.
9. Install the fuel cap and allow any spilled fuel to evaporate before starting the engine.

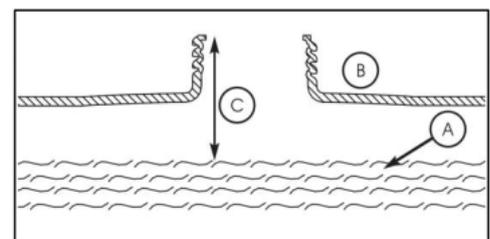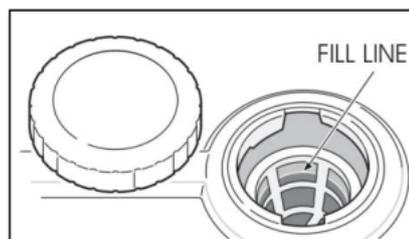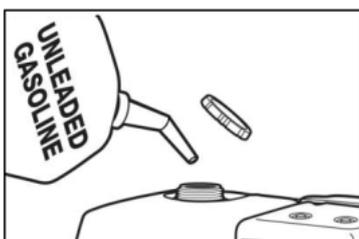

ADD THE HYDRAULIC OIL.

1. Open filler cap of the hydraulic oil tank.
2. The hydraulic tank capacity is 26 l. you only add the 20l into the tank. Noted: Add 26L AW32 hydraulic oil, in cold climates AW22 can be used and in hot conditions AW46 can be used.
3. Close filler cap of the hydraulic oil tank.



Add the saw chain lubrication

LUBRICATION

All of the firewood processor's lubrication points require Vaseline. There are four lubrication points:

1. Grease nipple of the input conveyor drive roller.
2. Nipples (3 pcs) of the output conveyor's drive roller.



WOOD FEEDING, CUTTING AND SPLITTING

The input conveyor belt or feed roller feeds the wood to be processed into the machine. Feed wood into the machine using control lever A.

When feeding wood into the machine, ensure that your clothes, hands or other body parts are not at risk of getting caught, for example, due to the log's shape. Do not use your hand to guide the log into the cutting section. Adjust the measuring device to the desired measurement.

1. Choose the log to process. Note that the maximum log diameter is 38 cm. The knottiness and shape of the log can increase the diameter.
2. The input conveyor belt can be driven forward by pressing lever A downward, especially when the log is further away from the cutting section and a longer and continuous feed motion is required.
3. Once the log stops for cutting in the mechanical measuring device, lock the log in place with the wood gripper by pressing down handle B.
4. Cut the log by pulling down lever C, which activates the saw chain and lowers the saw bar. After sawing through the wood, return the saw bar to the upper position by pushing up lever C.
5. Pull down lever D to move the splitting beam forward and split the log.
6. Simultaneously, press lever A downward, pushing the log into the cutting chamber for the next cycle of operation.

Re - splitting or splitting without cutting

Raise the guard of the cutting and splitting section.

Place the log you want to split in the splitting groove.

Close the guard of the cutting and splitting section.

Move the splitting beam forward for the desired length by pressing down lever D and return the splitting beam backward by pushing up lever D.

The above procedure can be used to split wood without cutting it.

Note! Placing logs directly on the input table with a loader is strictly prohibited.

Note! Ensure that the log's centre of gravity stays on the conveyor.

Sawing the last log

When sawing wood, the second to last piece should be sawn in such a way that the remaining piece is of a sufficient length. This ensures that the log will stay firmly under the wood gripper and that the sawing will be steady and safe.

USING THE DISCHARGE CONVEYOR

The firewood processor's discharge conveyor belt is driven by a hydraulic motor. The maximum operating angle for the discharge conveyor is 40°. The maximum angle is indicated on the label and the instructions attached to the discharge conveyor.

If the conveyor is jammed for any reason, the machine must be shut down before removing the cause. There must be at least 50 cm between the end of the output conveyor and the pile of processed firewood.

AFTER USE


1. After you have finished making firewood, stop the output conveyor, shut down the machine and remove the firewood from the splitting groove and conveyor.
2. Ensure that the machine has not been damaged.
3. Position the output conveyor so that the conveyor and firewood processor can be moved safely off the processed firewood.
4. Clean the machine.

If you will not be using the firewood processor for a while, do the following:

5. As necessary, carefully move it to a location where you can place the input and output conveyors as well as the working platform into their transport and storage positions.
6. Place the conveyors into the transport and storage position.
7. Clean the machine and carryout any maintenance.

OPERATING

MACHINE CONTROLS AND FUNCTIONS

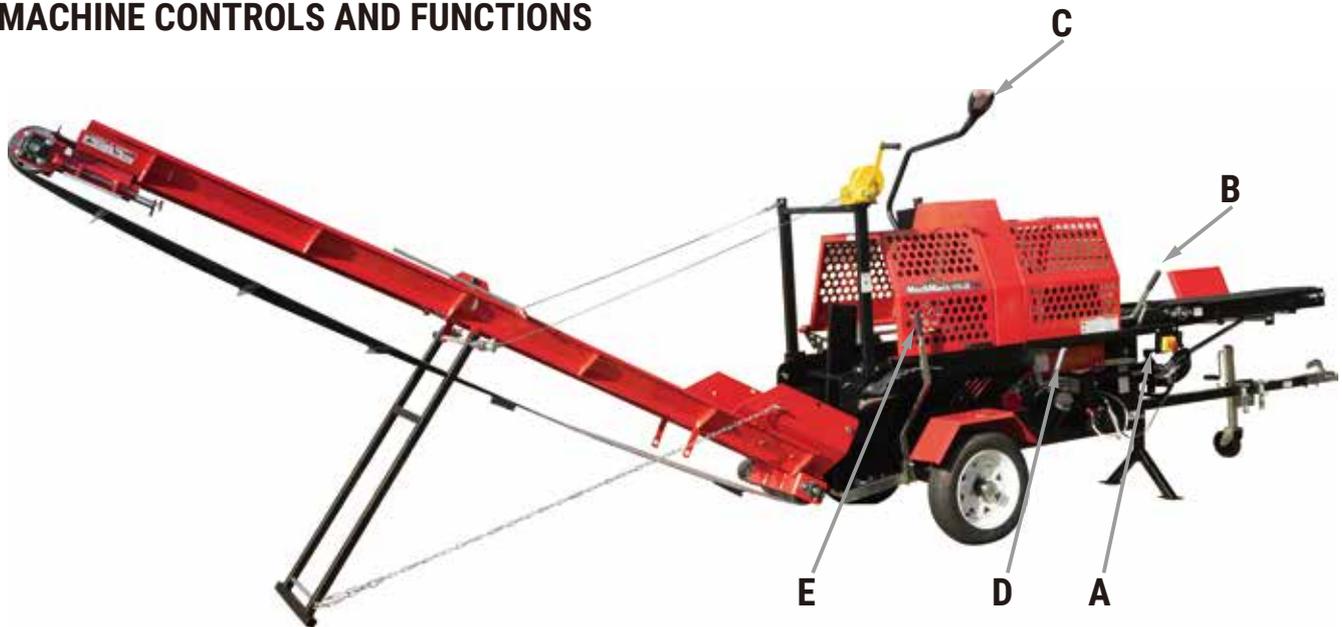

Names and functions of the controls

A. Feed conveyor control lever

- The feed conveyor belt rotates forward by moving the lever downward.

B. Wood gripper control lever

C. Cutting control lever

- When the control lever is depressed, the chainsaw begins to turn and cut the wood. When the cutting is complete, and the control lever is lifted to the original position, the chainsaw stops turning and the cutting is finished.

D. Splitting control lever.

- Push the handle downward, and the force ram moves forward to clear firewood.

- The force ram returns automatically when it reaches the split point.

- Push the handle upward, and the force ram retracts.

E. Height adjustment of the splitting knife.



Before the actual operation of the machine, a test run and functional test must be carried out. Both the test run and testing can only be performed by a person who has studied the machine's manual.



Before the test run, all of the components of the firewood processor must be checked. If any faults or wear and tear that may affect the safe use of the machine are discovered, the processor must not be used until the faulty or worn component is replaced and safe use can be ensured.

Before using the machine, the operator must ensure that the machine has not sustained any damage.

- The machine is positioned on a solid foundation.
- No unauthorised persons are within the machine's danger zone.
- All guards and safety devices are in place and functional.
- Opening the splitting and cutting guard will stop the machine's hazardous functions. This is an important safety feature.
- The hydraulic hoses and pipes are undamaged. The pipes must be replaced if there is a tear in the hoses or pipes, if they leak, or if the surface layer of the hydraulic hose has worn all the way down to the supporting weave.
- The machine does not leak oil.
- The machine functions properly.
- The emergency stop switch works properly.

Note! Do not use the machine if the requirements listed above are not met!

PERFORMING A TEST RUN ON THE MACHINE

1. Check that the guard for the firewood processor's splitting section is down.
2. Check that the input and output conveyors are in the operating position.
3. Ensure that the splitting groove is empty. And ensure that the emergency stop switch works properly.
4. Make sure that you are familiar with the functions of the machine's controls.
5. Start the engine.
6. Press down control lever C. The chain saw will start to rotate. Press it down to the lowest position and observe the chain saw's rotation. Check that the bottom of the chain saw is below the saw platform.
7. Start the splitting motion by pushing up lever D. The splitting beam should move forward when pushing the lever up and stop immediately when the lever returns to the initial position. It should move backwards when pulling the lever down and also stop immediately when the lever returns to the initial position.
8. Do the following to ensure that the saw chain lubrication functions automatically:
 - a. Use lever C to perform a few sawing motions without any actual logs.
 - b. Turn off the machine and disconnect it from the power source.
 - c. Open the guard and see if the saw chain has been supplied with oil.
9. Move the splitting beam forward and stop it by opening the cradle guard of the splitting section.
10. Ensure that the splitting beam moves backwards by pushing upward lever D.
11. Test run the feed motion of the input conveyor by pressing lever A downward.
12. Visually check that the output conveyor runs at normal speed.
13. Ensure that the splitting motion or saw chain cannot be activated with the guard open.

If a fault occurs during the test run, determine the cause of the fault and take remedial action as deemed necessary. The machine must be shut down and disconnected from the power source for the duration of both the diagnostics and repairs.

Note! Do not leave a running machine unsupervised!

MAINTENANCE

The machine must be disconnected from its power source before maintenance, adjustment, replacement or cleaning. Only use spare parts supplied by the manufacturer or your retailer. If the guards of the machine have to be removed for maintenance, they must always be reattached before activating the machine.

DISCONNECTING THE MACHINE FROM ITS POWER SOURCE

Ensure that the machine is inactive.

Once you have disconnected the machine from its power source, always ensure that the machine is completely inactive before performing any other measures!

ADJUSTING THE LOG LENGTH

The firewood processor is equipped with a mechanical log measuring device with an incremented adjustment value of 10 to 60 cm.

1. Turn off the machine, disconnect it from any power source, and open the protective cover of the machine.
2. Loosen the retaining bolts, then set the wood limiter in the splitting section to the desired length.
3. Re - tighten the retaining bolts.



HEIGHT ADJUSTMENT OF THE SPLITTING KNIFE

The splitting knife can be controlled mechanically by moving control lever E up or down. The splitting knife can be raised by moving lever E to the right and vice versa. Logs should always be as centred as possible when passing the knife, in order to keep the size of the firewood consistent.

The knife can be driven to the lowest position in one go by raising the knife and clearing the space under the knife of firewood. The machine must be shutdown and disconnected from its power source for the duration of the cleaning.



REPLACING THE SPLITTING KNIFE



Exercise extreme caution when handling the knife, and wear protective gloves.

1. Turnoff the machine and disconnect it from its power source.
2. Remove any firewood under the splitting knife and lower it to the lowest position using lever E
3. Open the guard and lift the splitting knife out of its slot. Install a new splitting knife by reversing the above steps.

ADJUSTING THE TIGHTNESS AND ALIGNMENT OF THE DISCHARGE CONVEYOR BELT

The tightness and alignment of the discharge conveyor belt can be adjusted using T-screw. Loosen adjustment T-screw on the side you wish the belt to run.




CUTTING BLADE AND DRIVE END

If the cutting blade of the machine does not penetrate the wood properly or the cut is skewed, the saw chain is most likely blunt. It is a good idea to keep a replacement chain handy, so that you do not need to interrupt your work to sharpen the chain.

Replacing and tightening the saw chain

Replace the saw chain as follows:

1. Turn off the machine and disconnect it from its power source.
2. Open the guard.
3. Loosen saw bar bolts A.
4. Fully loosen adjustment screw B for saw chain tension.
5. Remove the old saw chain.
6. Install the new saw chain and ensure that the cutting teeth come first in the rotating direction.
7. Then, lift the saw bar from the front section to tighten the chain as you are attaching the bolts.
8. Use adjustment screw B to tighten the chain and tighten fastening bolts A.

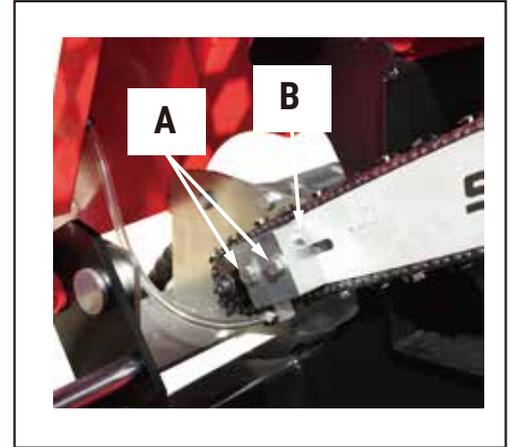


When checking the tension of the saw chain, wear protective gloves. Pull the lower edge of the chain. The tension is correct if you can pull out three to four teeth of the chain into full view by applying moderate force.

Note! Use protective gloves when handling the saw.

Replacing the saw bar

Replace the saw bar as follows:



1. Remove the saw chain according to steps 1-5 of "Replacing and tightening the saw chain".
2. Remove the saw bar bolts (2 pcs) and remove fastening plate A.
3. Remove the saw bar from the groove.
4. Place the new bar against gearwheel B, twist it into the groove and loosely attach the saw bar bolts and fastening plate A.
5. Attach and tighten the saw chain according to steps 6-8 in "Replacing and tightening the saw chain"

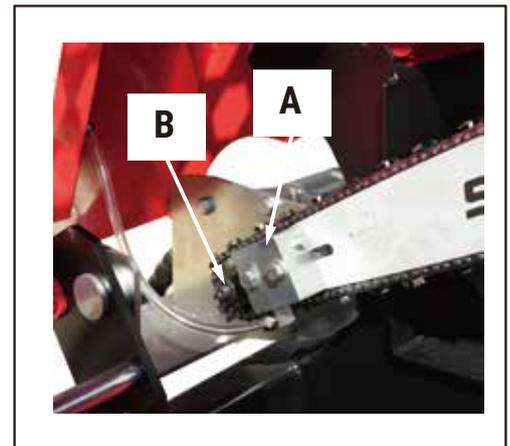

CHANGING THE HYDRAULIC OIL

Change the hydraulic oil of the firewood processor as follows:

1. Turn off the machine and disconnect it from its power source.
2. Open filler cap A of the hydraulic oil tank (this will allow the oil to drain more easily).
3. Open drain plug B and drain the oil into a suitable container.
4. Tighten plug B firmly, and fill the tank with fresh oil (approx. 20 l).

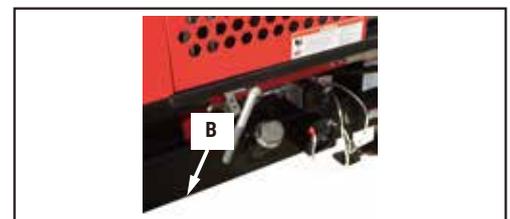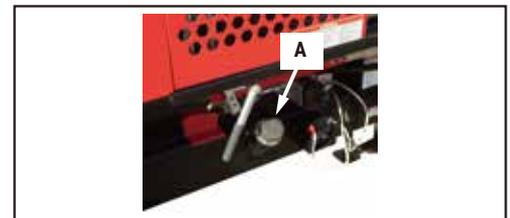


CONVEYOR MAINTENANCE

Replacing and tightening the feed conveyor belt

Replace the feed conveyor belt as follows:

1. Turn off the machine and disconnect it from its power sources.
2. Raise and lock the input conveyor into the transport position.
3. Move the belt joint to a suitable height.
4. Disconnect the joint by using pliers, for example, to pullout pin A that holds the joint together.
5. Remove the old belt.
6. Insert the new belt from the side of the input conveyor's drive roller through opening B, until you can pull the belt out from other end.
7. Connect the joint by inserting pin A into the joint.
8. Turn the conveyor back to the operating position and tighten the belt. Use adjustment nuts C to adjust the belt.

The belt is at the correct tension when its middle section is raised approx. 5 cm when the conveyor is in the operating position. An excessively tight belt may be damaged more easily, and it places unnecessary strain on the conveyor bearings.

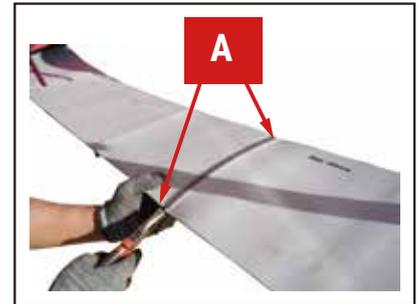

Replacing and tightening the discharge conveyor belt

The instructions for tightening and aligning the discharge conveyor are presented in Section After Use. Replace the discharge conveyor belt as follows:

1. Turn off the machine and disconnect it from its power sources.
2. Pullout the pin locking the conveyor in place, and lower the conveyor to the ground.
3. Move the belt joint to the beginning of the conveyor.
4. Fold the conveyor, but do not place the belt support in the transport position. This will allow the belt to hang loose.
5. Disconnect the joint by opening the bolts.
6. Remove the old belt.
7. First, insert the new belt under the folded conveyor (bottom opening) from the end of the convey- or with the plates facing downwards. Feed the belt in until you can pull it out from the other end of the conveyor. Pullout a length of approx. 60 cm.
8. Push the other end of the belt into the upper section of the folded conveyor (top opening) from the end of the conveyor. Feed it in until you can connect the joint.
9. Pull the excess belt to the start of the conveyor.
10. Open the conveyor to the operating position, and tighten and adjust the belt.

The belt is at the correct tension when its middle section is raised approx. 15 cm when the conveyor is in the operating position. An excessively tight belt maybe damaged more easily, and it places unnecessary strain on the conveyor bearings.

WASHING AND CLEANING

Loose debris and sawdust can be cleaned from the machine with pressurised air, for example. The machine can also be washed with a pressure washer, as long as the water jet is not aimed directly at the bearings or electrical equipment. Always ensure that the machine and the working area are sufficiently clean during operation. The machine must always be cleaned after use. Clean the machine as necessary, and always before storing the machine for a prolonged time.

STORAGE

The firewood processor must be stored on a level and solid foundation. Although the machine is intended for outdoor use, it should be covered and stored in a sheltered location or indoors.

MAINTENANCE TABLE

Target	Task	Daily	Interval 50 h	Interval 500 h	Sub-stance/accessory item
Hydraulic oil	Check 1st change	X	X	X	Amount approx. 20 l
Normal conditions	Subsequent				Such as Teboil S 32
Oil filter	Always when changing oil				
Cutting blade	Sharpen as necessary				0.325" 66/1.5
Machine	Clean Wash	X			
Emergency stop switch	Clean/check visually	X			
Winch and strap	Check	X			

FAILURES AND REMEDIAL MEASURES

Failure	Cause	Remedial measure
The splitting force is insufficient for splitting the wood.	The relief valve of the splitting and cutting valve has been tightened excessively. The seal of the splitting cylinder piston is leaking.	Clean and open the relief valve slightly by tightening the hex socket screw. First ask for additional instructions from your machine's retailer! Change the cylinder seals.
The feed conveyor belt does not move.	The belt is too loose.	Tighten the belt in accordance with the instructions in "Replacing and tightening the input conveyor belt".
The discharge conveyor does not move.	The belt is too loose. The discharge conveyor's relief valve is leaking.	Tighten the belt in accordance with the instructions in "Replacing and tightening the output conveyor belt". Clean the relief valve or replace it as necessary.
The cutting motion does not fully cut the log.	The path of the saw bar is incorrectly adjusted.	Lower the path of the saw bar.
The chainsaw does not properly penetrate the wood.	The chainsaw is dull or veers to the side (due to uneven sharpness). The saw bar is crooked.	Sharpen or replace the saw chain. File the bar to make it straight.

JAMMING OF THE CUTTING BLADE

If the cutting blade gets jammed in the log, stop sawing and try again on another section of the log. If the cut is misaligned because the bar drags to one side, the sharpness of the saw chain must be checked. A chain that is not evenly sharp will always drag towards the blunter side, which will make cutting a thick log impossible. Moreover, sawing with an evenly dull chain is inefficient, and the chain must be sharpened or replaced .

JAMMING OF THE WOOD ON THE SPLITTING KNIFE

If a piece of wood gets jammed on the splitting knife in a situation where the splitting force is insufficient to push the piece past the knife despite several attempts to do so, do the following:


Return the splitting cylinder to the initial position with lever D .

Ensure that the log to be split does not exceed the maximum allowable dimensions.

Lift the splitting knife to the highest possible position with lever E and activate the splitting.

If necessary, cut a sufficiently thick piece of wood (approx. 10 cm), place it into the splitting groove behind the jammed piece, and activate the splitting process. The new piece will then push the bottom part of the jammed piece past the knife. Lower the knife by approx. 5 cm and repeat step 3. Repeat step 4 until the jammed wood has passed the knife, piece by piece.

HYDRAULICS DIAGRAM

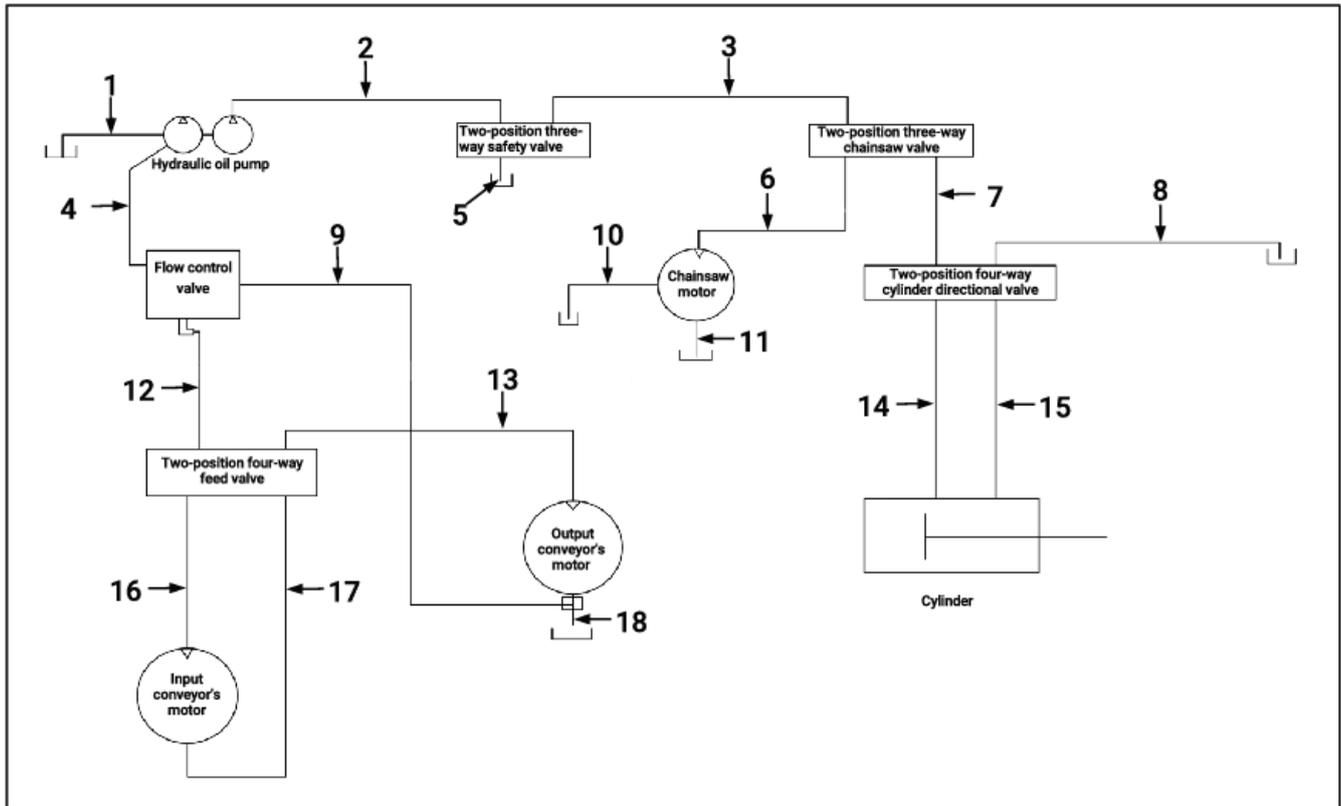


Hydraulic Hose List

NO.	DESCRIPTION	CONNECTOR INFORMATION
1	Oil inlet hydraulic hose 5/8"x14"	90 degree bend joint M27x1.5
2	Safety valve inlet hydraulic hose 1/2"x51"	90 degree bend joint M22x1.5
3	Chainsaw valve inlet hydraulic hose 1/2"x40"	90 degree bend joint M22x1.5
4	Flow control valve inlet hydraulic hose 1/2"x16"	Straight connection M22x1.5
5	Safety valve return hydraulic hose 1/2"x20"	90 degree bend joint, straight connection M22x1.5
6	Chainsaw inlet hydraulic hose 1/2"x51"	90 degree bend joint M22x1.5
7	Cylinder directional valve inlet hydraulic hose 1/2"x16"	90 degree bend joint, straight connection M22x1.5
8	Cylinder directional valve return hydraulic hose 1/2"x24"	Straight connection M22x1.5
9	Flow control valve return hydraulic hose 1/2"x87"	90 degree bend joint, straight connection M22x1.5
10	Chainsaw return hydraulic hose 3/8"x43"	90 degree bend joint, straight connection M18x1.5
11	Chainsaw return hydraulic hose 1/2"x36"	Straight connection M27x1.5
12	Feed valve inlet hydraulic hose 1/2"x12"	90 degree bend joint M22x1.5
13	Output conveyor's motor inlet hydraulic hose 1/2"x6"	90 degree bend joint, straight connection M22x1.5
14	Cylinder inlet hydraulic hose 1/2"x33"	90 degree bend joint, straight connection M27x1.5
15	Cylinder return hydraulic hose 1/2"x24"	90 degree bend joint, straight connection M27x1.5
16	Input conveyor's motor inlet hydraulic hose 1/2"x32"	90 degree bend joint, straight connection M22x1.5
17	Input conveyor's motor return hydraulic hose 1/2"x32"	90 degree bend joint, straight connection M22x1.5
18	Output conveyor's motor return hydraulic hose 1/2"x36"	Straight connection M22x1.5

EXPLODED VIEW

MAIN EXPLODED DRAWING

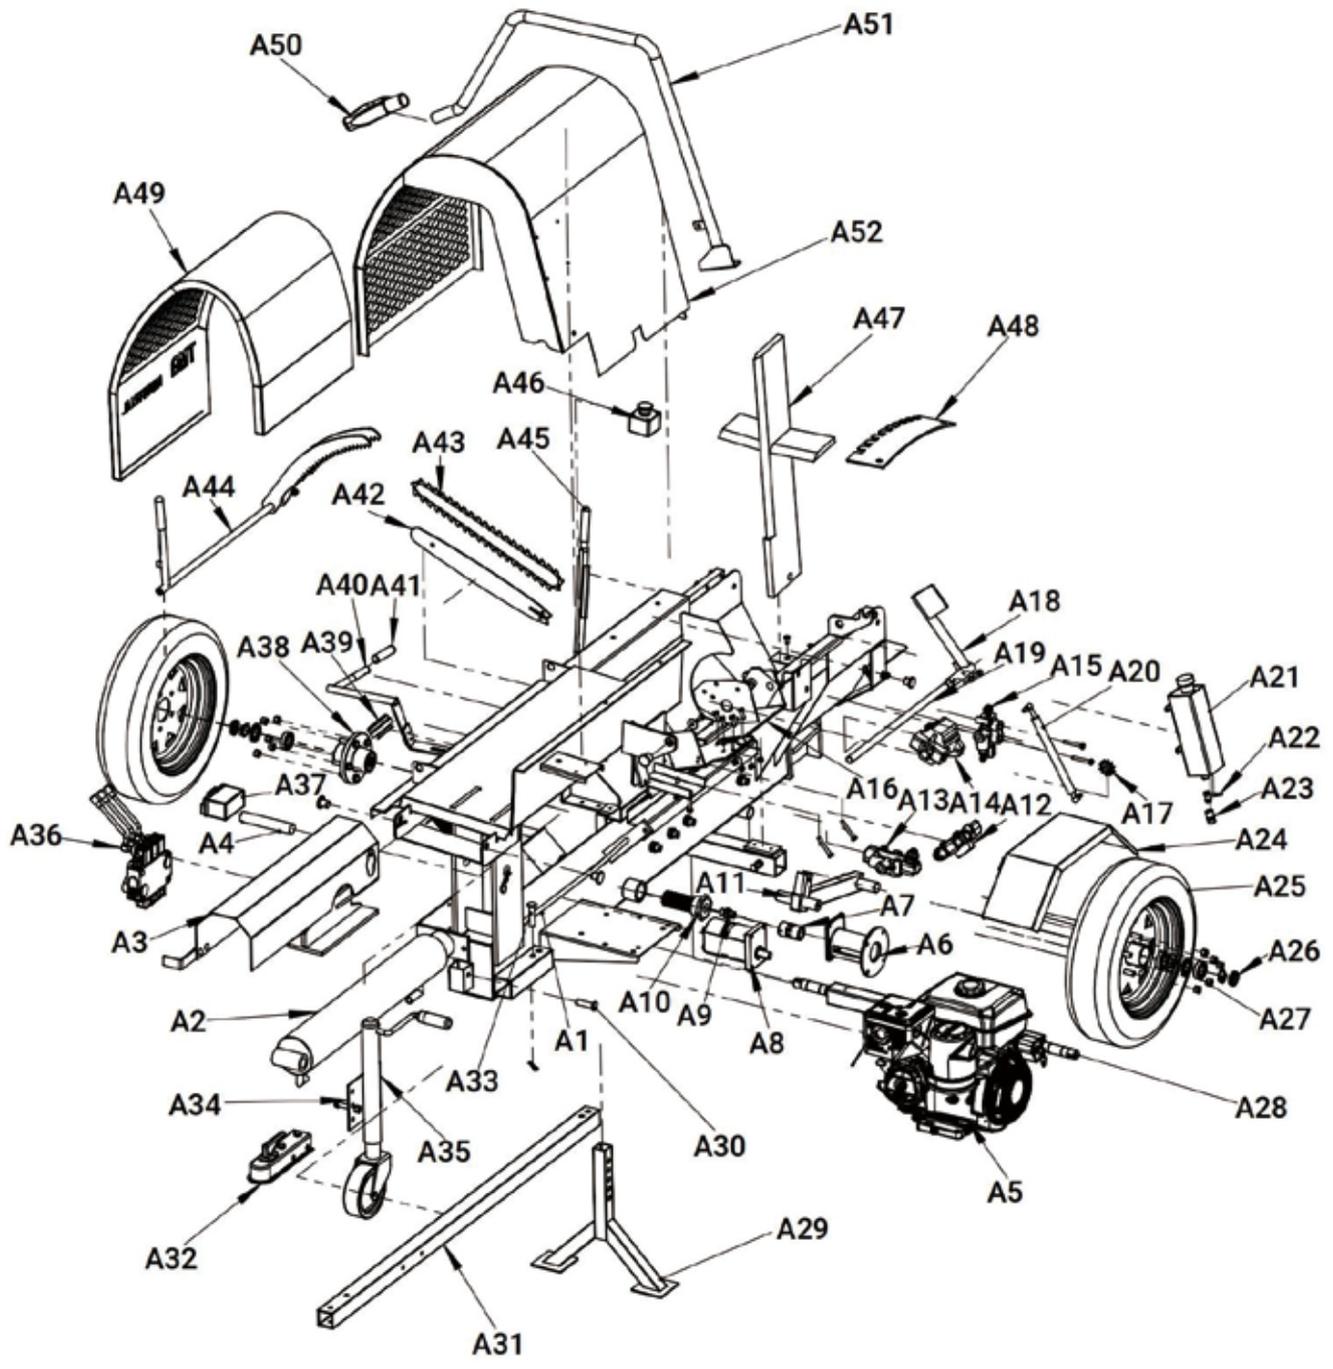


Main Parts List

NO.	DESCRIPTION	QTY
A1	Main support	1
A2	Hydraulic cylinder 4"x24"	1
A3	Safety cover of hydraulic cylinder	1
A4	Pin of hydraulic cylinder Ø30x6.8"	1
A5	Engine	1
A6	Oil pump support	1
A7	Directly coupling	1
A8	Hydraulic pump	1
A9	Oil inlet connection	1
A10	Feed the oil filter	1
A11	Swivel bar	1
A12	The control valve of hydraulic cylinder	1
A13	The control valve of chainsaw	1
A14	Motor of chainsaw	1
A15	Safety valve	1
A16	Motor support	1
A17	Chain wheel	1
A18	Stopper	1
A19	Stopper sliding rail	1
A20	Chainsaw restoring lever	1
A21	Chainsaw lubrication oil tank	1
A22	Lubrication oil tank switch	1
A23	Lubrication oil tank connection	1
A24	Mudguard	2
A25	Wheel	2
A26	Self-locking nut M27x1.5	2
A27	Wheel hub bearing	4
A28	Wheel axle	1
A29	Tripod leg	1
A30	Pin of tripod leg	1
A31	Towing bar	1

NO.	DESCRIPTION	QTY
A32	Trailer coupler 2"	1
A33	Trailer pin	1
A34	Trailer jack support	1
A35	Trailer jack	1
A36	The control valve of input conveyor	1
A37	Battery 12V,3AH	1
A38	Wheel hub	2
A39	Cover of hydraulic tank	1
A40	Adjusting rod	1
A41	Adjusting rod cover	1
A42	Chainsaw bar 18"	1
A43	Chainsaw blade	1
A44	Wood gripper	1
A45	Handle of wood gripper	1
A46	Emergency stop switch	1
A47	4-way wedge	1
A48	Wedge adjustment plate	1
A49	Saw guard	1
A50	Operating lever sleeve	1
A51	Handle of chainsaw	1
A52	Splitter guard	1

FEED CONVEYOR EXPLODED DRAWING

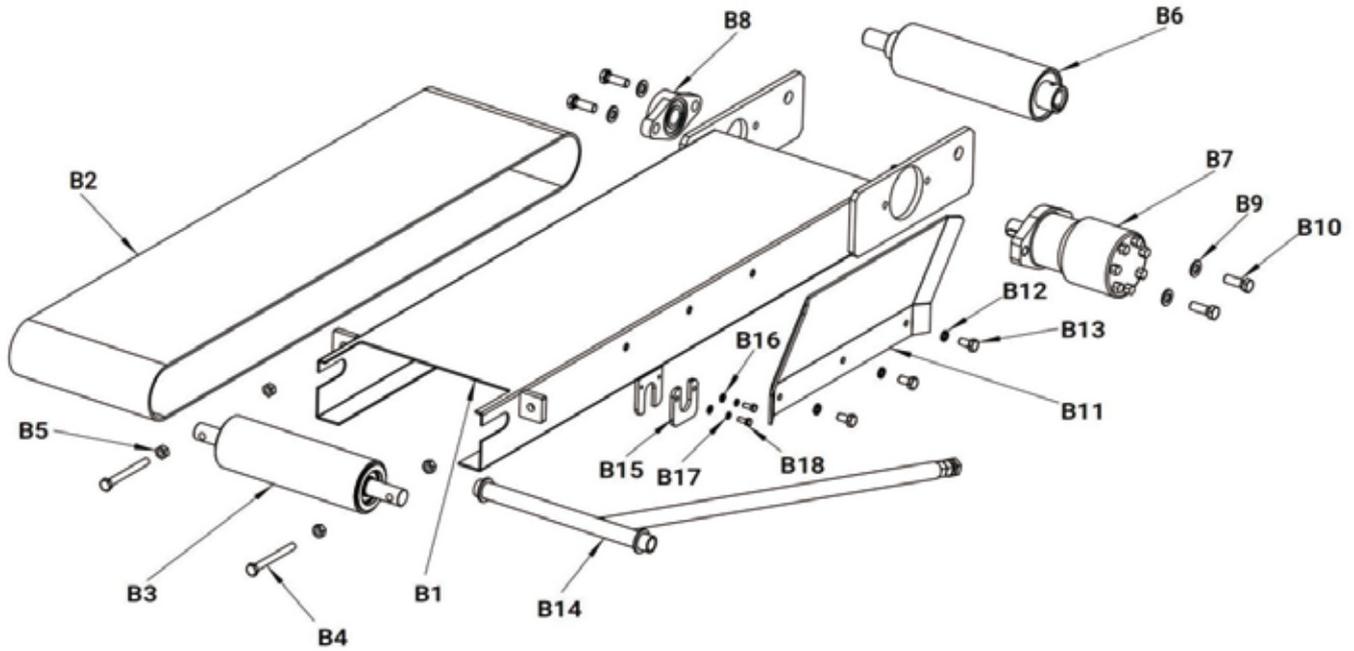


Feed Conveyor Parts List

NO.	DESCRIPTION	QTY
B1	Feed rack support	1
B2	Feed conveyor belt 250X350	1
B3	Tail pulley weld assy	1
B4	Adjustable bolt from tail pulley M10x70	2
B5	Hexagon lock nut M10	4
B6	Driver pulley weld assy	1
B7	Hydraulic motor R200	1
B8	Bearing housing UCFL205	1
B9	Plain washer Ø12	4

NO.	DESCRIPTION	QTY
B10	Hexagon bolts M12x35	4
B11	Feed deflector	1
B12	Spring washer Ø10x2	3
B13	Hexagon bolts M10x20	3
B14	Feed rack support rod	1
B15	Support plate	1
B16	Plain washer Ø6	1
B17	Spring washer Ø6	1
B18	Hexagon bolts M6x16	1

DISCHARGE CONVEYOR EXPLODED DRAWING

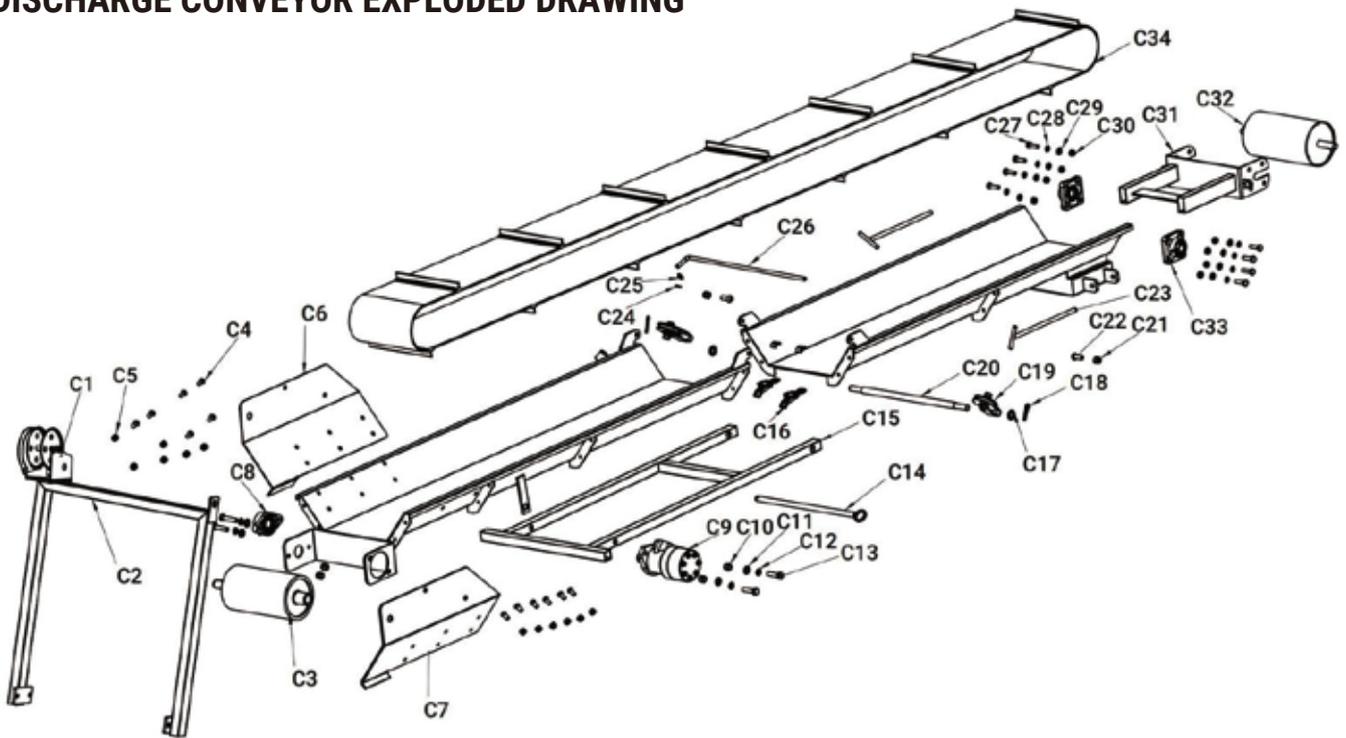

Discharge Conveyor Parts List

NO.	DESCRIPTION	QTY
C1	Hand winch 1200lbs	1
C2	Winch support	1
C3	Driver pulley weld assy	2
C4	Hex socket flat round head screw M10x20	12
C5	Self-locking nut M10	12
C6	Fixing plate left	1
C7	Fixing plate right	1
C8	Driver pulley bearing housing UCFL205	1
C9	Hydraulic motor R200	1
C10	Hexagon nut M12	4
C11	Plain washer Ø12	4
C12	Spring washer Ø12	4
C13	Hexagon bolts M12x45	4
C14	Support leg fixed shaft	1
C15	Support leg	1
C16	Adjustable buckle	2
C17	Plain washer Ø16	2

NO.	DESCRIPTION	QTY
C18	R-pin	2
C19	Lifting pulley	2
C20	Support leg shaft	1
C21	Hexagon bolts M10x30	2
C22	Hexagon lock nut M10	2
C23	T adjustable bolts	2
C24	Split cotter Ø3.2x16	1
C25	Plain washer Ø10	1
C26	Conveyor belt support rod	1
C27	Hexagon bolts M10x35	8
C28	Spring washer Ø10	8
C29	Plain washer Ø10	8
C30	Hexagon nut M10	8
C31	Tail pulley support	1
C32	Tail pulley weld assy	1
C33	Bearing housing UCFU204	2
C34	Discharge conveyor belt 250X6800	1

MechMaxx

info@mechmaxx.com