

WOOD CHIPPER

Assembly

► Model: B200

⚠ WARNING




ALWAYS READ THE USER MANUAL CAREFULLY AND FOLLOW THE SAFETY INSTRUCTIONS

Scan to view the installation video.




Required

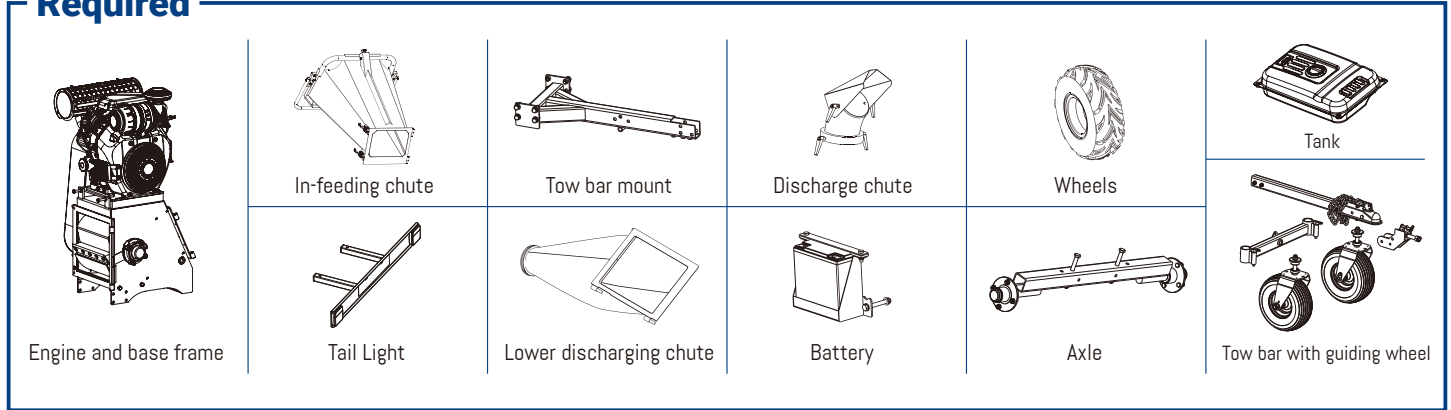

01. Axle


Attach the wheel axle to the cutter base using M14×140 Hex Bolts (B), Flat Washer 14 (C), and M14 Lock Nuts (A).

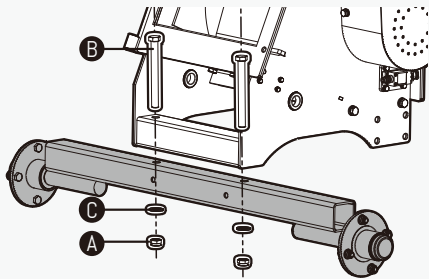

A	Hex lock nut M14		x 2
B	Hex bolt M14 X 140mm		x 2
C	Flat washer 14		x 2

02. Wheels


Attach the wheels to the wheel axles using M10×25 Hex Bolts (B), Flat Washer 10 (C), and M10 Lock Nuts (A).

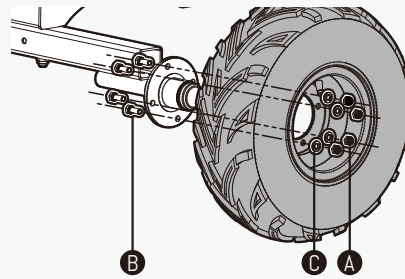

A	Hex lock nut M10		x 8
B	Hex bolt M10 X 25mm		x 8
C	Flat washer 10		x 8

03. Tow bar mount


Attach the tow bar mount to the base frame using M12×35 Hex Bolts (B), Spring Washer 12 (A), and Flat Washer 12 (C).

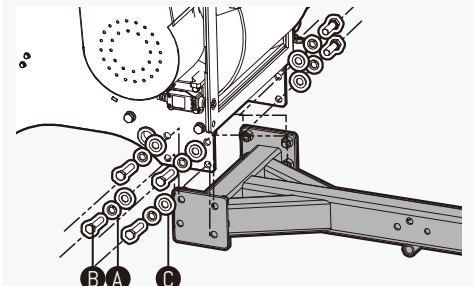

A	Spring washer 12		x 8
B	Hex bolt M12 X 35mm		x 8
C	Flat washer 12		x 8


04. Tow bar and Guiding wheel

1. Attach the pivoted axle to the tow bar mount using M10×80 Hex Bolts (B), Flat Washer 10 (C), M10 Lock Nuts (A), and D Pin Ø5×30 (D).

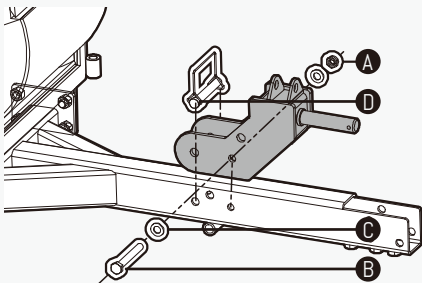


A	Hex lock nut M10		x 1
B	Hex bolt M10 X 80mm		x 1
C	Flat washer 10		x 2
D	D Pin Ø5×30		x 1

2. First, install the steering wheel onto the front wheel axle using M16 Hex Lock Nuts (A), Flat Washer 16 (C), Stamped End Cover (D), and Flat Washer 20 (B). Then, attach the front wheel axle to the pivoted axle using M20×2 Fine Thread (E) and Cotter Pin Ø5×32 (F).

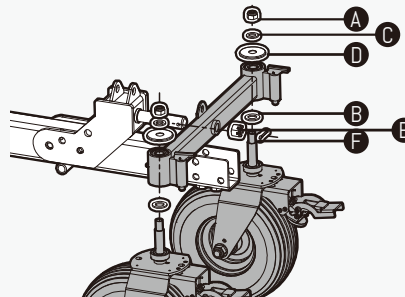

A	Hex lock nut M16		x 1
B	Flat washer 20		x 1
C	Flat washer 16		x 1
D	Stamped End Cover		x 1
E	Fine Thread M20×2		x 1
F	Cotter Pin Ø5×32		x 1


Secure the front wheel axle again using Pin Shaft 12×75 (A), Flat Washer 12 (B), and R Pin (C). Then, assemble the tow bar onto the pivoted axle using M12×80 Hex Bolts (D), Safety Cable (E), Flat Washer 12 (B), M12 Nuts (G), and D Pin Ø10×60 (H). At the bottom, secure it with M12×25 Handle (I) and Circlip 12 (F).

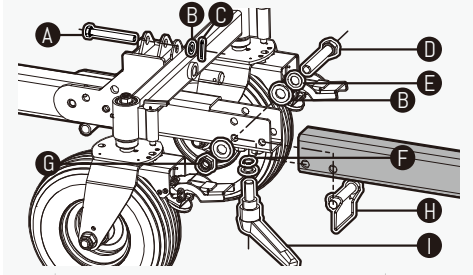

A	Pin Shaft 12×75		x 1
B	Flat washer 12		x 4
C	R Pin		x 1
D	M12×80 Hex Bolts		x 1
E	Safety Cable		x 1
F	Circlip 12		x 1
G	Hex lock nut M12		x 1
H	D Pin Ø10×60		x 1
I	M12×25 Handle		x 1


05. Lower expulsion chute

Assemble the Lower Expulsion Chute onto the base frame using Flat Washer 12 (C), Pin Shaft $\varnothing 12 \times 70$ (B), and Cotter Pin $\varnothing 3.2 \times 22$ (A).

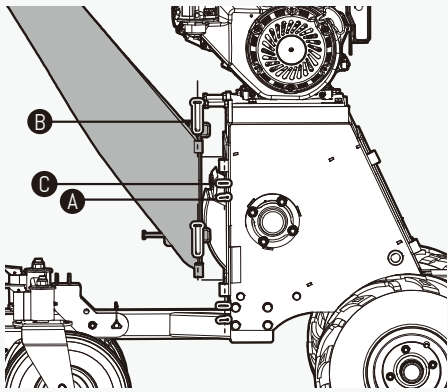


A	Cotter Pin $\varnothing 3.2 \times 22$	x 2
B	Pin Shaft $\varnothing 12 \times 70$	x 2
C	Flat Washer 12	x 2

Attach the lower expulsion chute to the cutter base using two lock catches.

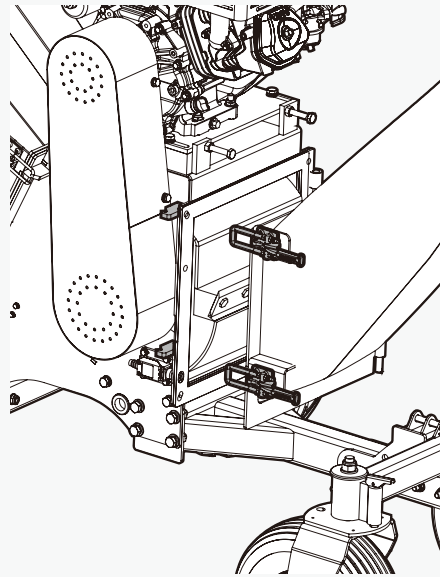

06. 360-degree upper expulsion chute

Attach the upper expulsion chute to the lower expulsion chute using the Clamp Handle (A).

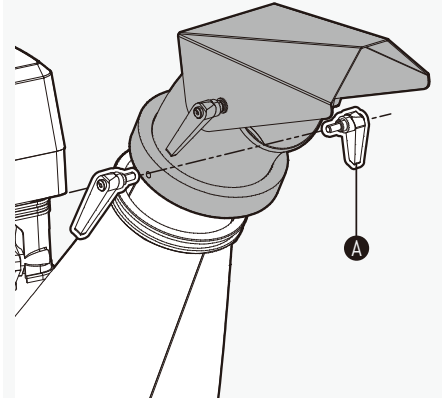


A	Clamp handle	x 2
----------	--------------	-----

07. Battery

Attach the battery box to the wheel axle using M10x80 Hex Bolts (B), Flat Washer 10 (C), and M10 Lock Nuts (A).


Connect the battery cables: red to the positive terminal and black to the negative terminal.

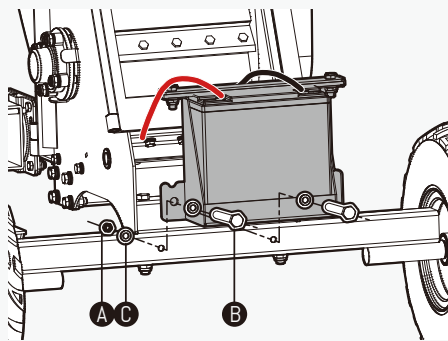

A	Hex lock nut M10	x 2
B	Hex bolt M10 X 80mm	x 2
C	Flat washer 10	x 4


08. Infeed chute

Assemble the Infeed Chute onto the base frame using Flat Washer 12 (C), Pin Shaft $\varnothing 12 \times 70$ (B), and Cotter Pin $\varnothing 3.2 \times 22$ (A).

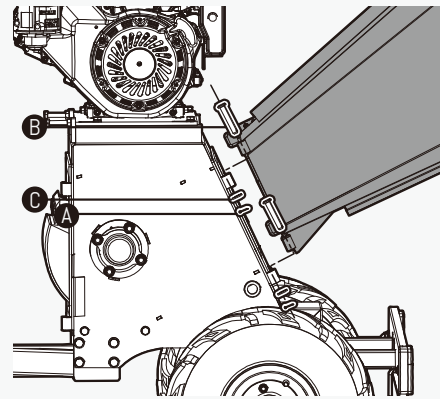


A	Cotter Pin $\varnothing 3.2 \times 22$	x 2
B	Pin Shaft $\varnothing 12 \times 70$	x 2
C	Flat Washer 12	x 2

Attach the feeding chute to the cutter base using the two lock catches.

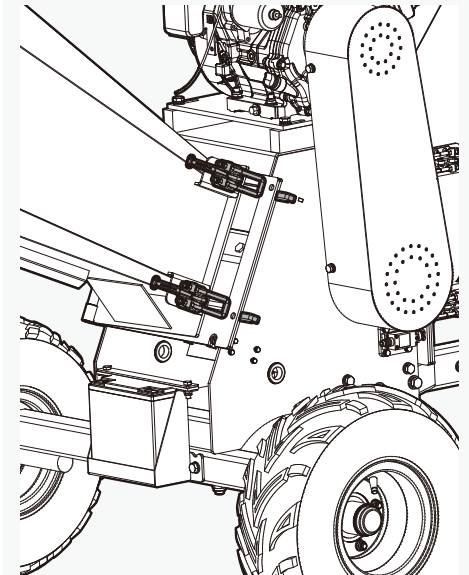


09. Tank

Install the fuel tank support beam onto the engine using the bolts supplied on the engine, and assemble the opposite side following the same method.

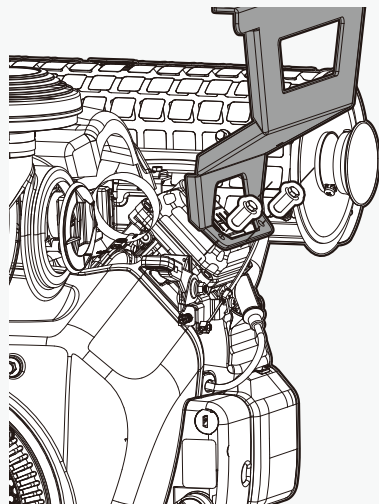


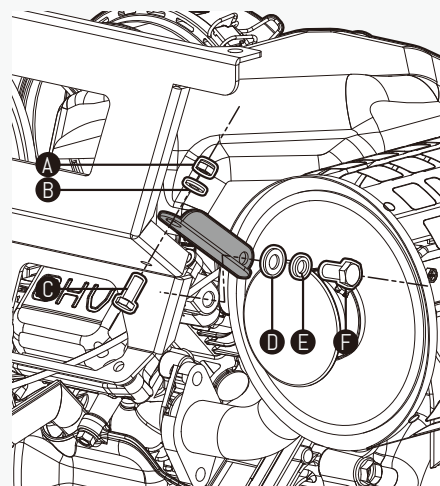


Install the fuel tank support beam using Hex Bolt M8x16 (F), Spring Washer 8 (E), Flat Washer 8 (D), Lock Nut M6 (A), and Hex Bolt M6x16 (C) with Flat Washer 6 (B). Install the other side in the same way.



A	Hex lock nut M6	x 2
B	Flat washer 6	x 2
C	Hex bolt M6 X 16mm	x 2
D	Flat washer 8	x 2
E	Spring Washer 8	x 2
F	Hex bolt M8 X 16mm	x 2

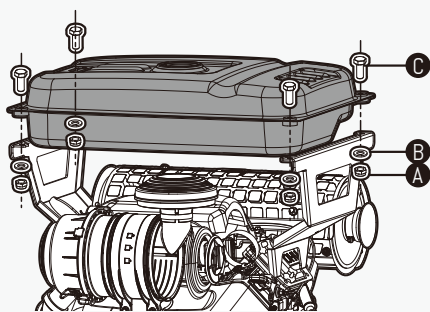 Install the four corners of the fuel tank onto the fuel tank bracket using Hex Head Bolt M8×30 (C), Flat Washer 8 (B), and Hex Lock Nut M8 (A).



- | | | | |
|----------|-------------------------|---|-----|
| A | Hex lock nut M8 |  | x 4 |
| B | Flat washer 8 |  | x 4 |
| C | Hex head bolt M8 X 30mm |  | x 4 |

10. Fuel line


Connect the fuel hose from the engine to the fuel tank and tighten the fuel hose nut.

11. Vent hose

Connect the vent hose from the engine to the fuel tank vent port.


WARNING

- 1.The fuel tank has two ports. The small port is the vent port, and the large threaded port is the fuel outlet port. Do not connect them incorrectly.
- 2.There is a valve at the fuel outlet port. Be sure to open the fuel outlet valve before starting the machine to prevent damage.

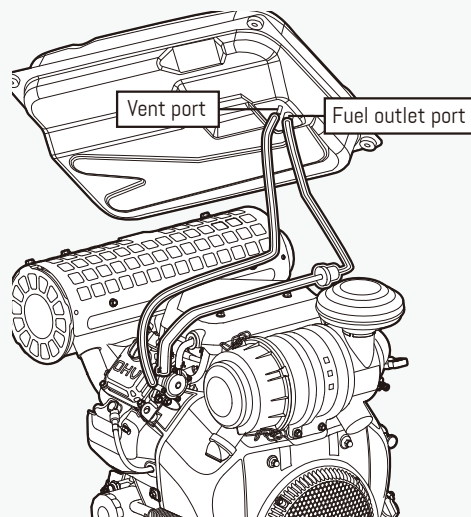

12. Tail Light


Attach the taillights to the shaft using M12×120 hex bolts (B), M12 hex lock nuts (A), and 12 flat washers (C).

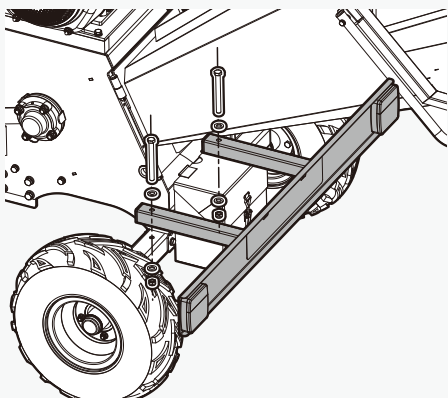

- | | | | |
|----------|----------------------|---|-----|
| A | Hex lock nut M12 |  | x 2 |
| B | Hex bolt M12 X 120mm |  | x 2 |
| C | Flat washer 12 |  | x 4 |

13. Emergency Stop and Limit Switch

The emergency stop switch and the limit switch require four connections using 2-pin connectors. All four connections follow the same procedure and can be connected in any order.

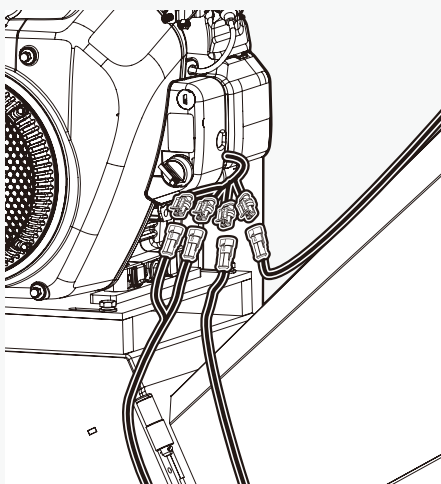

14. Taillight line

For the taillight wiring, route the wires through the bottom of the wood chipper and then into the tow bar. Connect the 7-pin plug to the towing vehicle. At the rear of the taillights, use the rotary connectors to join the two taillight wires.

